


DRIFT HD

user manual

contents

Quick Start	5	b) Remote Pairing	
Overview	7	• To Cancel a Remote Pairing	17
Precautions		• Pairing the Remote Control	18
a) General Precautions	8	• Pairing Multiple Cameras to a Single Remote	18
b) Weather Resistance	8	Conserving Battery Life	19
Mounting the Camera	9	Camera Care	20
Preparing for Use		Menu Options	
a) Battery Installation		a) Main Menu	
• Installing the Camera Battery	11	• Opening the Sub-Menus	21
• Changing the Remote Control Battery	11	b) Video Menu	
b) Powering on and Charging		• Video Playback	21
• Turning the Camera On	11	• Deleting Videos	21
• Turning the Camera Off	11	c) Photo Menu	
• Charging the Battery	11	• Viewing Photos	21
• Battery Life	12	• Slideshow Function	21
c) Camera Lens Rotation		• Deleting Photos	22
• Rotating the Lens	12	d) Video Configuration Menu	22
d) Using the SD Card		e) Setup Menu	23
• Inserting and Removing the SD Card	13	f) Setting the Time & Date	24
• Formatting the SD Card	13	Connecting the Camera to a Computer or TV	
• Recording Time	13	a) Connecting the Camera to a Computer	25
Using the Camera		• Connecting to a Windows PC	25
a) Changing the Record Mode	15	• Connecting to a Mac	25
b) Video Mode		b) Playing and editing video footage on a Computer	26
• Recording Video	15	c) Connecting the Camera to a TV	26
c) Photo Mode		Replacing the Lens	27
• Taking Photos	15	FAQ	30
d) Time Lapse Mode		Computer System Requirements	31
• Taking Time-Lapse Photos	16	Troubleshooting	32
• Changing the Sequence Interval	16	Technical Specification	33
e) Zoom	16	Further Help	34
Using the Remote		Warranty	36
a) Basic Remote Use			
• Using the Remote Control	17		

quick start

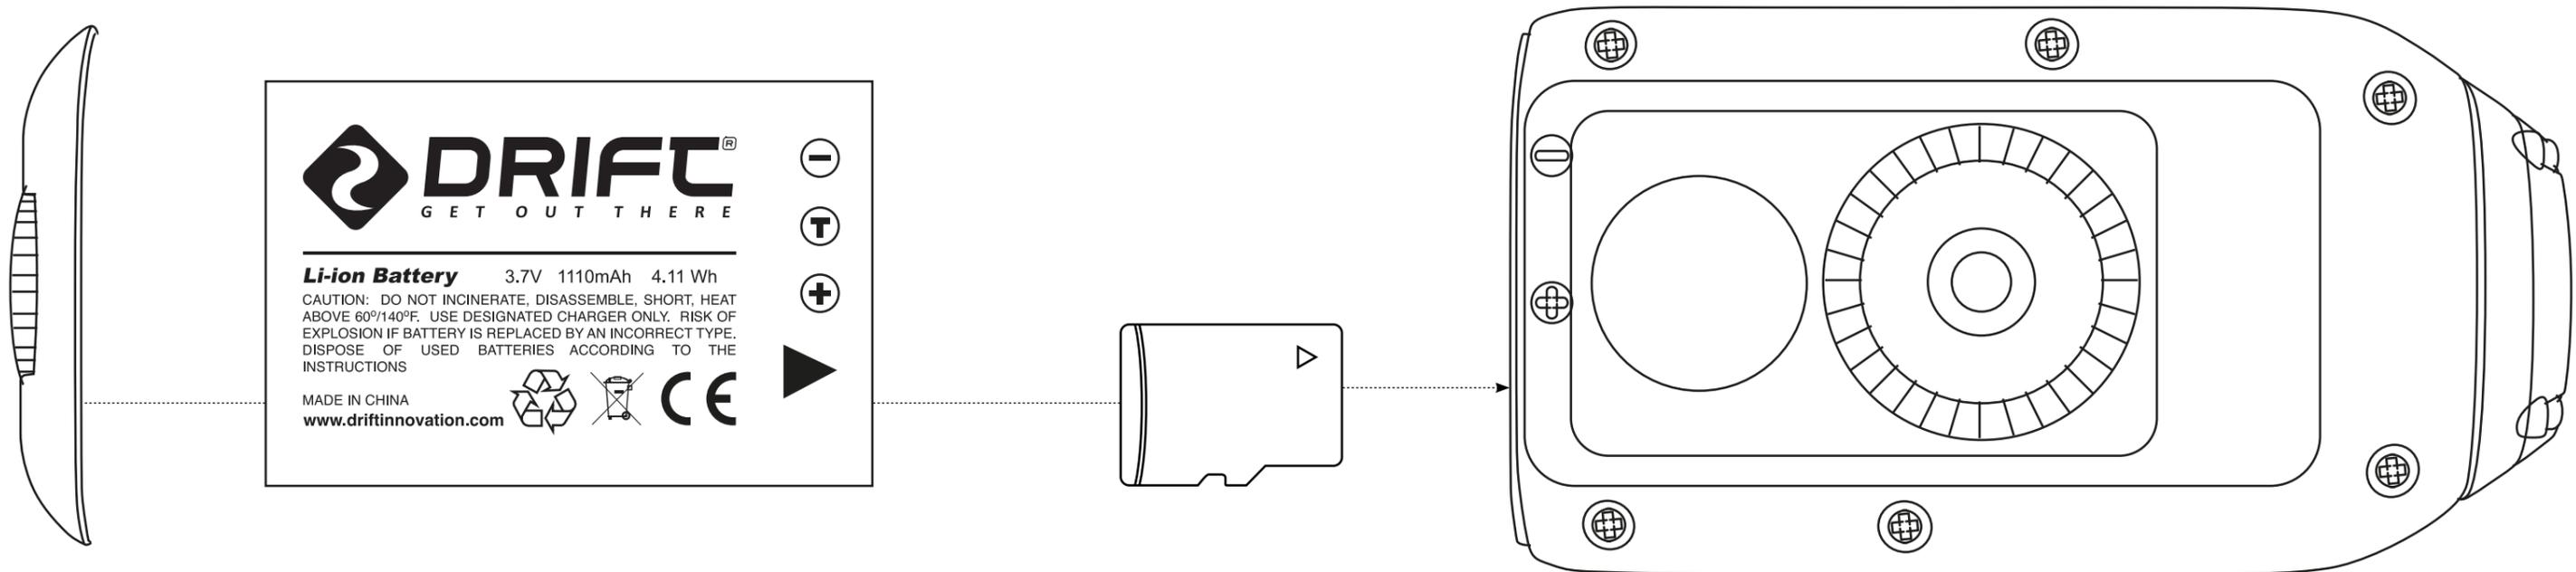

We have carefully designed the Drift HD package as an all-in-one solution, allowing you to shoot in virtually any situation without having to purchase extra equipment apart from a micro SD card. We want you to be able to start using your camera as soon as possible. This section contains the basic information you need right away. The Drift HD has many more features than these described here – please refer to later sections for more information.

Getting ready to use the camera

Please unscrew the rear hatch of the camera (anti-clockwise movement). Then, gently insert the battery (more details on page 11) and a micro SD memory card (more details on page 15) as illustrated below. Securely screw the rear hatch back to its original position (clockwise movement).

Securely mount the camera. The LCD screen's live preview allows for accurate positioning to get the best possible shot. A full description of the various mounting options can be found on pages 9-10. Do not forget the lens of your camera can be rotated!

Turning the camera on

Press the SELECT button to turn the camera on. The LCD screen will turn on and the LED in the SELECT button will turn green. Once switched on, the Drift logo will appear and the camera will enter the Live Preview mode. In Live Preview Mode, the screen will display a live image from the camera lens, and a number of icons indicating the recording options, remaining memory and battery life – an overview of these can be found on page 18. To turn your camera off, press and hold the Select button for 3 seconds.

Note: The rechargeable battery will need to be fully charged before its first use. Please see page 12 for details on how to proceed in order to charge the battery.

Recording Video

1. To begin recording, press the SELECT button on the camera or the RECORD button on the remote control. The unit will beep and the LED will turn red.
2. To stop recording, press the SELECT button again, or the STOP button on the remote. There will be another beep and the LED will turn green.

Capturing Photos

The default recording mode for the camera is Video mode. In order to take photos, the Photo mode must be selected. Changing the Record Mode is described on page 17.



1. Once the Record Mode has been changed to Photo, return to Live Preview mode by pressing the MENU button a few times.
2. Use the LCD screen to aim the camera at your subject.
3. Press the SELECT button on the camera or the RECORD button on the remote control. The unit will beep once and the LED will briefly turn red.
4. Once the LED returns to green, the camera is ready to take another photo.

Reviewing Photos and Video

To change any of the camera settings or review / play back videos or photos recorded with the Drift HD, press the MENU button on the camera. This will bring up the Main Menu: If the memory card contains any videos or photos taken with the Drift HD, these will be indicated by a number on the Video or Photo icons. Using the UP and DOWN buttons, highlight the Video icon or the Photo icon and press the SELECT button. You can now browse your files using the UP and DOWN buttons. Full details about the Video & Photo Menus can be found on pages 28-29.

Note: You will need to change the record mode back to video to be able to record video again.

overview

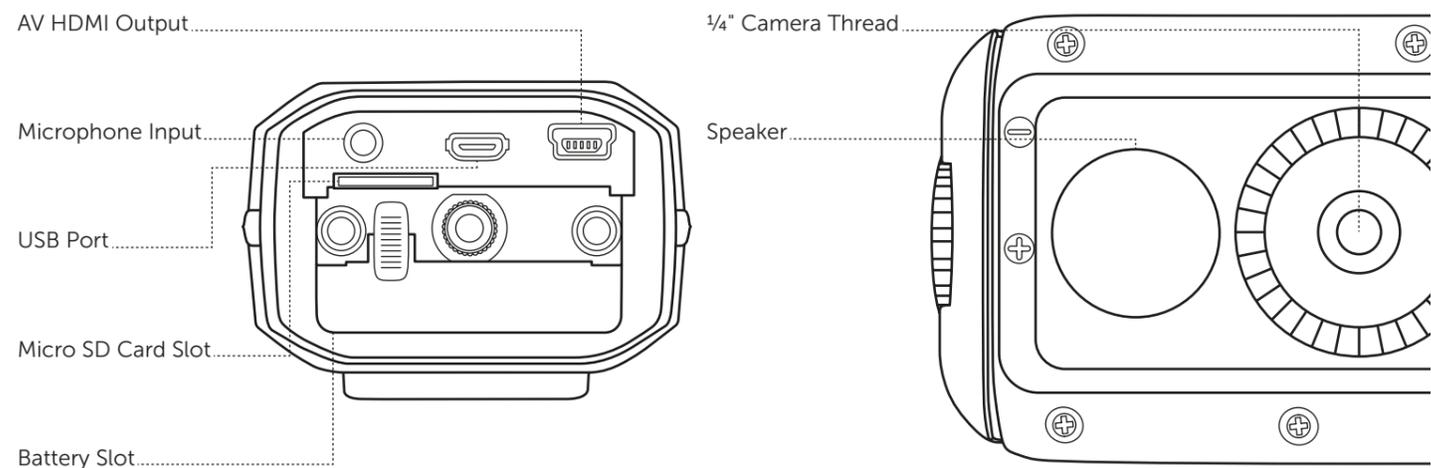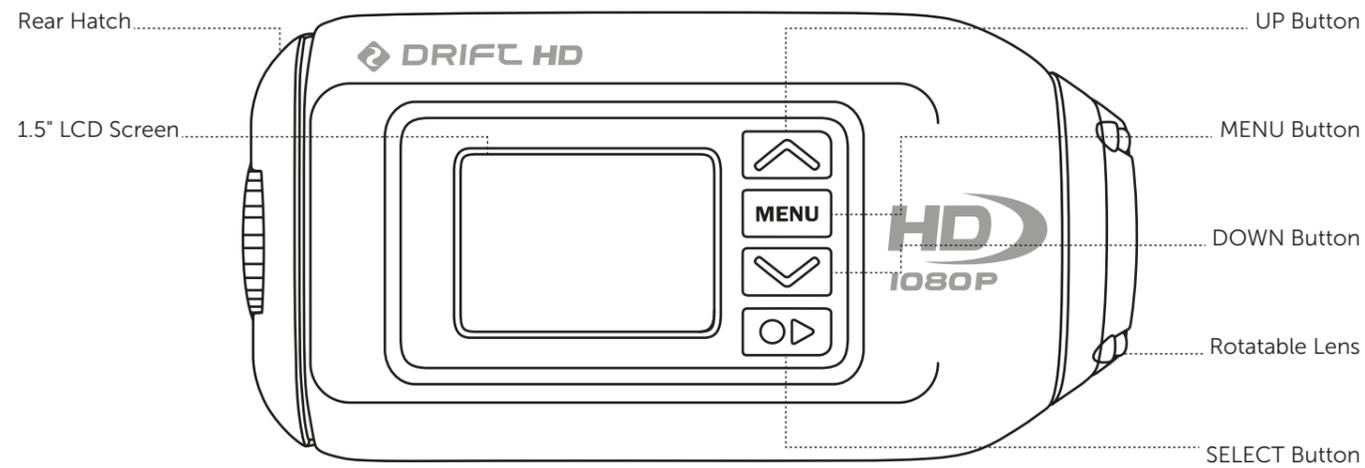

precautions

A) GENERAL PRECAUTIONS

Please take note of the following guidelines when using your Drift HD:

- The camera is shock resistant, but not shock proof.
- For your safety, do not press the buttons on the camera body during sports activities.
- Do not place the camera in areas prone to dust or damp for extended periods of time.
- Do not leave the camera in places exposed to extremely high temperatures, such as under direct sunlight, for extended periods of time. This may affect the camera housing and internal components.
- Clean the lens with a soft cloth to remove fingerprints or dust. Please do not use chemicals.
- The camera has a working temperature range of -10°C to 40°C (50 to 104 F)
- Turn the camera off before removing the batteries or memory card. The card and data may be damaged if the memory card is inserted or removed while the camera is switched on.
- Remove the batteries and memory card before storing the camera for long periods of time.

B) WEATHER RESISTANCE

The Drift HD action camera is fully splash-proof and weatherproof, but it is not designed to be used in a water environment. Please be aware of this when using your Drift HD. The camera was designed to withstand dust, snow, rain, splashes and even an accidental quick submersion; however it was not designed to stay submerged while not in its waterproof case. Drift Innovation will not assume any responsibility for camera malfunction caused by liquid entering the camera as a result of misuse by the user.

- Liquid may get inside the camera if the hatch is not installed properly, or if a non-waterproof hatch is used. Always ensure that the hatch you're employing is securely locked.
- If the camera gets wet, wipe the liquid off as soon as possible with a dry cloth.
- Other camera accessories may not be waterproof – please read their instructions carefully.
- The in-built microphone is covered with a rubber seal as shown on the opposite page – this is not to be removed, changed or punctured in any way, or the camera will no longer be waterproof, and your warranty will be void.

Attention:

- Rechargeable batteries are only to be charged under adult supervision.
- The battery terminals are not to be short-circuited.
- Do not open, puncture or otherwise damage the Lithium-Ion battery, or dispose of it in fire.

Disclaimer:

Drift Innovation will not, under any circumstances, be responsible for injuries or property damage incurred during participation of any high-risk sport/activity not endorsed or recommended by Drift Innovation. Remember that the warranty will only cover manufacturing defects.

mounting the camera

The Drift HD can be mounted in a different number of ways using the mounts provided:

Fixing the Camera onto the Universal Clip

1. Align the screw of the universal clip with the thread on the underside of the camera body.
2. Twist the screw thread in a clockwise direction.
3. As the universal clip tightens against the body of the camera, rotate the universal clip to provide the desired angle of attachment.
4. Tighten the screw on the universal clip until the clip fits firmly against the camera body.

Mounting the Camera on a Goggle Mount

1. Attach the goggle mount to the strap of your goggle.
2. Slide the camera (with universal clip attached) into the goggle mount until the two arms on the clip 'click' into place.

Mounting the Camera on a Helmet

1. Position the helmet mount against your helmet to find the optimum mounting position.
2. Ensure the surface you wish to attach the helmet mount to is clean, dry and free of oil and dust. Attach the remaining velcro strip onto the helmet.
3. Adhere the mount to the helmet using the 3M VHB adhesive provided. Allow 24 hours to cure.
4. Slide the camera (with universal clip attached) into the helmet mount until the two arms on the clip 'click' into place.

Mounting the Camera on a Vented Cycle- or Kayak Helmet

1. Position the helmet mount on the top or side of your helmet to find the optimum mounting position.
2. Thread the velcro strap through the slits in the helmet mount to attach it to the helmet.
3. Slide the camera (with universal clip attached) into the helmet mount until the two arms on the clip 'click' into place.


Mounting the Camera onto a Tripod, Monopod or Suction Cup Mount

1. The camera has a standard tripod thread (1/4"-20) embedded into the camera body. This is the same thread as the one used to attach the universal clip, and used in nearly every camera accessory available.
2. Thread the camera onto a tripod, camera mount or suction mount (not included), or any other mount with a standard camera thread.

Tips on Mounting the Camera:

- Great video footage generally features another person or object. In skiing or snowboarding this could be the skier in front, or your own skis. In motorsports, this can be the fairing of a bike or a car bonnet. If your object is moving too, like a wheel or bike pedals, so much the better. Experiment to find the most exciting shots.
- Your camera doesn't necessarily have to face forward. A classic POV video technique is the direct user shot. For example in mountain biking, try mounting the camera on the handlebars and pointing it back at the user - It makes for some great action footage.
- If your activity allows, mount the camera in different positions between shots. Then, when editing your video later you can cut between various angles to make something truly special. Some pros use more than one camera so they can shoot multiple angles at the same time.
- The lens of the Drift HD can be rotated to help you align your shots. Please refer to the lens rotation section on page 12 for further information.

! However you choose to mount your camera, ensure that the camera is fitted firmly to reduce the risk of losing it. Give it a tug before you set out, just to make sure.

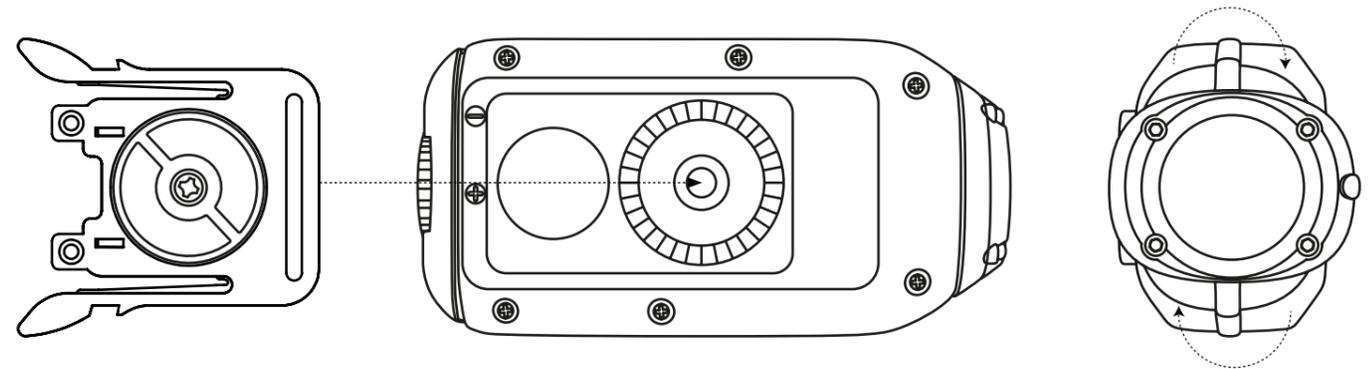

preparing for use

A) BATTERY INSTALLATION

Installing the Camera Battery

1. Please unscrew the rear hatch of the camera (anti-clockwise movement).
2. Holding the camera with the LCD screen facing down, insert the battery with the label facing upwards and the arrow pointing into the slot. Once gently pushed in all the way, the battery will lock into place.
3. Screw the rear hatch of the camera (clockwise movement) back to its original position.
4. To remove the battery if needed, push down the lever holding the battery in place. The battery is spring loaded, and will slide out promptly.

Changing the Remote Control Battery

The remote control is supplied with a battery already installed, and is ready to use out of the box. If the remote stops working, this battery can be replaced.

1. Using a small screwdriver, remove the four screws fixing the remote control battery cover.
2. Carefully remove the battery and replace it (model CR2032, presented as a coin).
3. Replace the remote control battery cover and the four screws.

B) POWERING ON & CHARGING

Turning the Camera On

Press the SELECT button. The LCD screen will turn on and the LED will turn green. The LCD screen will show the Drift logo, and the camera will enter Live Preview mode.

Turning the Camera Off


To turn the camera off, press and hold the SELECT button for 3 seconds.

Note: The camera can be set to turn off automatically in order to conserve battery power (page 19).

Charging the Battery

The Drift HD comes with a rechargeable Lithium-Ion battery which can be charged with the included USB cable. Socket-to-USB adaptors can be used as well.

1. Ensure the battery is in the camera and the unit is powered off.
2. Insert the smaller end of the USB cable into the USB mini slot inside the camera.
3. Attach the other end of the USB cable to a USB port in your computer, or to a USB power adapter (not included).
4. If charging via a computer, the LED will turn blue and the screen will go black. If charging via a USB power adapter or a USB cigarette lighter adapter, the camera will switch on.
5. To charge the camera, press and hold the SELECT button for 3 seconds. The screen will turn off and the LED will turn blue, to indicate charging is in progress.

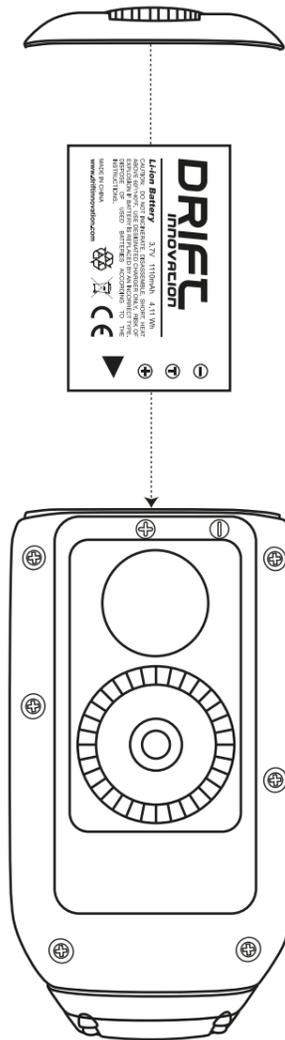

Note: Remove the battery if the camera is not going to be used for an extended period of time.

Note: Take care not to damage the waterproof seal when replacing the remote battery.

Note: The camera will switch on automatically when it is connected to an external power source.

6. Once the camera is fully charged, the LED will turn off. Remove the USB cable and close the rear hatch. It takes around 2½ hours to be battery to be fully charged.

Note: If the LED is does not turn blue, the battery is not charging. Please follow the above instructions carefully to ensure that the LED turns blue and the battery does actually charge.

Note: When charging the camera with a USB cable via a Mac, you may get an error message about an incorrectly removed external device. This is not a problem and can be safely ignored.

Note: The battery needs to be fully charged before its first use.

Battery Life

At a temperature of 25°C (77 F), with all power-saving features switched off, with the LCD switched on and the camera recording continuously, the battery will last for about 3 hours on a full charge.

In very cold conditions like -5°C (23 F), with all power-saving features switched off, the LCD switched on and the camera recording continuously, the battery will last for about 2.5 hours on a full charge.

Note: Please see the Conserving Battery Life section on page 19 for details on how to make the battery last longer.

Using an external power supply

The Drift HD can be powered by an external power supply such as a USB power adapter, a battery kit or a cigarette lighter adapter. We do recommend you to power off your camera before plugging your camera to any external power supply.

Note: Plugging an external power supply into the camera does not recharge the battery unless you put the camera into charging mode (page 11). The battery will not charge when the camera is switched on.

If the external power is cut off during recording (e.g. if the cigarette lighter adapter comes loose), the camera will immediately start drawing power from the rechargeable battery instead and continue recording, protecting your footage from file corruption.

Note: This feature will only work if the battery is charged. If using your camera with an external power supply, we recommend charging the battery beforehand to ensure your files are protected.


C) CAMERA LENS ROTATION

A unique feature of the Drift HD is the rotating camera lens. In order to maximise your mounting options, the lens can rotate through a total of 300°, allowing for an upright image from even the most awkward positions.

Rotating the Lens

Whilst holding the camera body in one hand, use your index finger and thumb of your other hand to grab the camera lens firmly. Twist the camera lens to the desired angle.

! When the low battery warning appears, please recharge the battery. If the battery runs out while recording video, the data on the card may become corrupted. In most situations, the camera will close the video file and power off automatically, but we cannot guarantee that the footage on the card will not be lost during an abrupt interruption of power.

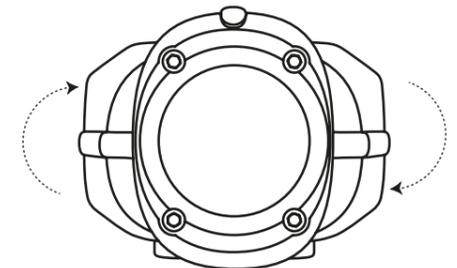

! The camera lens cannot be rotated through 360° – it can only be rotated through a range of 300°. At either end of this range, there is a hard stop. Do not force the camera rotation past this point, as you risk damaging the components. If excess resistance is experienced, double-check that you have not reached the camera rotation stop.

! The camera is weatherproof and this is not affected by the rotation of the camera lens. However, do not rotate the lens while the camera is wet or covered in mud, as this may force liquid into the body of the camera and damage the components.

preparing for use

D) USING THE MICRO SD CARD

The Drift HD can take micro SD / SDHC cards of up to 32GB in size.

Inserting and Removing the Micro SD Card

1. Turn the camera off.
2. Remove the rear hatch, unscrewing it (anti-clockwise movement).
3. Insert the Micro SD card into the memory card slot, ensuring that the card's terminals are facing up. Carefully push it all the way in until it clicks into place.
5. Screw the rear hatch of the camera (clockwise movement) back to its original position.
4. To remove the SD card if needed, push the card until it clicks and then pull the card out.

Note: The Drift HD cannot record any video or photo files without a memory card

Formatting the Micro SD Card


It is possible to delete all the data on a memory card by formatting it. When using a new memory card for the first time, formatting it is recommended.

1. Press the MENU button to open the Main Menu.
2. Highlight the Setup icon and press the SELECT button.
3. Highlight the Format option on the Setup Menu and press the SELECT button.
4. Confirm that you want to format the card by highlighting the tick icon and pressing SELECT button. The formatting process will take several seconds. Please be patient during this process.

Note: Formatting the Micro SD card does not delete your custom preferences such as resolution, menu language, FPS or screen brightness.

Note: The recording times in the table below are an approximation. Actual recording times for Micro SD cards will vary depending on the recording conditions.

	Approximate Recording Time		
	1080p HD	720p HD	WVGA (SD)
1 GB	10 mins	17 mins	26 mins
2 GB	21 mins	34 mins	52 mins
4 GB	42 mins	1h 08 mins	1h 44 mins
8 GB	1h 24 mins	2h 17 mins	3h 28 mins
16 GB	2h 48 mins	4h 34 mins	6h 56 mins
32 GB	5h 35 mins	9h 08 mins	13h 53 mins

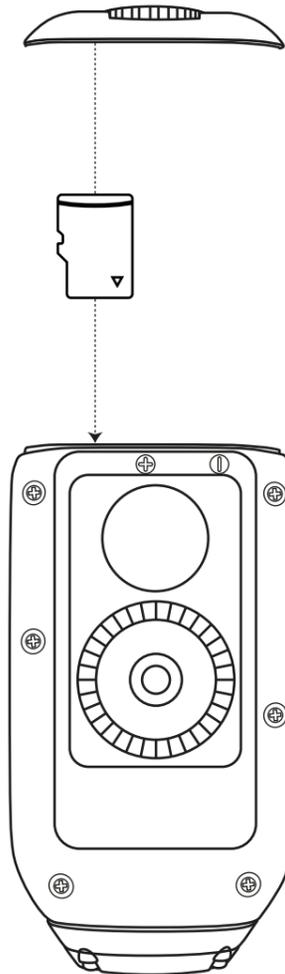

! Ensure that the camera is powered off when inserting and removing a memory card. The card and the data may be damaged if inserted or removed while the camera is turned on.

! Once the card is formatted, this cannot be undone. Ensure any files you wish to keep have been copied onto your computer, as all data on the SD card will be lost once formatted.

using the camera

A) CHANGING THE RECORD MODE

In order to switch between recording video and shooting photos, you will need to change the camera Record Mode in the Video Configuration Menu.

1. Press the MENU button to open the Main Menu.
2. Use the UP and DOWN buttons to highlight the Video Configuration icon, and press the SELECT button.
3. The screen will show a list of settings. Highlight the Record Mode option and press the SELECT button.
4. Highlight the icon of the Record Mode you wish to use and press the SELECT button again.
5. Press the MENU button twice to return to Live Preview mode.

Note: The camera must be in Live Preview mode to record any video or take any photos. The MENU button also functions as a BACK button. Press the MENU button a few times to return to Live Preview mode.

B) VIDEO MODE

When the camera is in Video mode, the screen will display a live preview image from the camera lens and a number of icons indicating the camera's status.

Recording Video

1. Ensure that the camera has been set to Video Mode using the Video Configuration menu.
2. To start recording, press the SELECT button on the camera or the RECORD button on the remote control. The unit will beep and the LED will turn red.
3. To stop recording, press the SELECT button again, or the STOP button on the remote. There will be another beep and the LED will return to green.

Note: If the SD card runs out of space while recording, the camera will stop recording but it will remain switched on. You will need to turn it off yourself unless Camera Auto-Off has been enabled (page 19).




Note: If the video being recorded is very long, the video file will be separated into multiple files every 3.6 GB (i.e. every 40 minutes in 1080p). This is automatic – you do not need to monitor this process. The camera will resume filming after a few seconds, once the file is saved. Please be patient while the file is saving.

B) PHOTO MODE

When the camera is in Photo mode, the screen will also display a live preview image, but the camera status icons are slightly different.

Taking Photos

1. Ensure that the camera has been set to Photo mode using the Video Configuration menu.

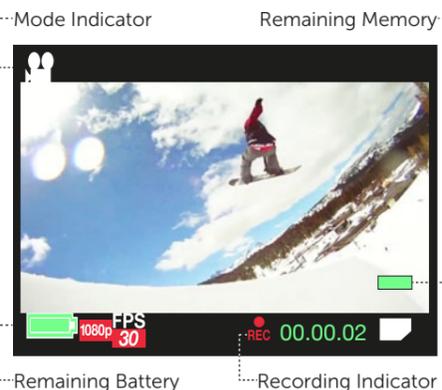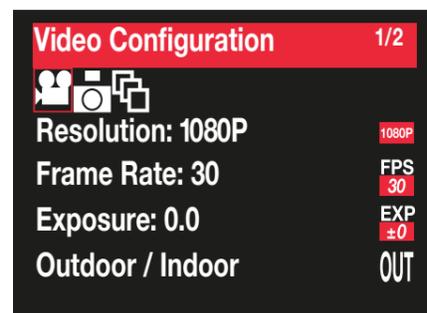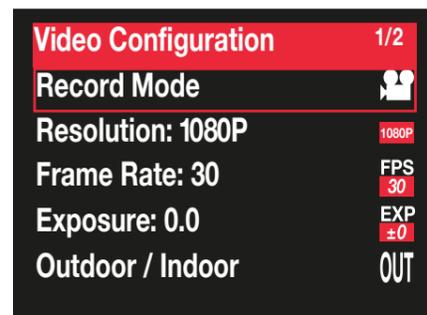

2. Press the SELECT button on the camera or the RECORD button on the remote control. The unit will beep once and the LED will briefly turn red.
3. Once the LED returns to green, the camera is ready to take another photo.

D) TIME-LAPSE MODE

Taking Time-Lapse Photos

The Drift HD includes a time lapse mode. When activated, the camera will take a photo every few seconds until it is stopped or the memory card is full.

1. Ensure that the camera has been set to Time Lapse mode using the Video Configuration menu.

2. Press the SELECT button on the camera or the RECORD button on the remote control. The unit will beep once and the LED will briefly turn red.

3. The camera will take photos every 3 seconds by default.

Note: You can change the time interval between time-lapse photos by modifying the Sequence Interval setting as described below.

Changing the Sequence Interval

1. Press the MENU button to open the Main Menu.
2. Use the UP and DOWN buttons to highlight the Video Configuration icon, and press the SELECT button.
3. The screen will show a list of settings. Highlight the Sequence Interval option and press the SELECT button.
4. Use the UP and DOWN arrows to choose the desired time interval and press the SELECT button to confirm.

Note: The Sequence Interval setting can only be changed when the record mode is set to Time-Lapse. The available Sequence Interval settings are 3 seconds, 5 seconds, 10 seconds and 30 seconds.


E) ZOOM

The Drift HD includes a digital zoom function that allows you to take close-up photos and videos. To use it, press and hold the UP arrow to zoom in, and the DOWN arrow to zoom out.

Note: You can zoom in and out while video recording is in progress

Note: The zoom indicator bar may disappear when it is not in use.

Note: Please be aware that using the digital zoom may affect the image quality of your recording.

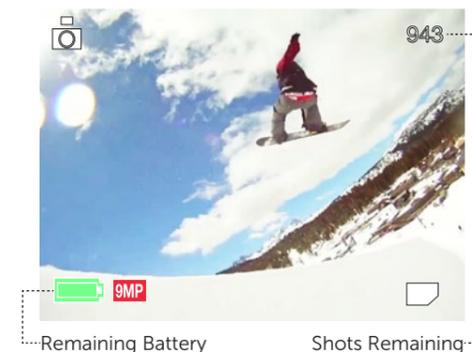

using the remote

A) BASIC REMOTE USE

The Drift HD comes with a wireless RF (radio frequency) remote control to allow easy, hands-free operation of the camera. It can be used both to record video and to take photos.

Note: Always make sure you fasten the remote control tightly and securely so you do not lose it.

Using the Remote Control

1. Ensure that the remote control has been enabled. If in doubt, open the Main Menu, highlight the Setup menu and press SELECT. There should be a tick by the Remote Control setting on the first page of the Setup Menu.
2. Attach the remote control to your wrist, handlebar or jacket using the short velcro strap.
3. With the camera in Live Preview Mode, press the RECORD button on the remote to start recording or to take a photo. If the camera speaker is switched on, there will be a beep.
4. If the camera is in Video Mode, press the remote control's STOP button to stop recording. If the speaker is switched on, the camera will beep again.

Note: The remote control will not operate the camera if the camera is switched off.


B) REMOTE PAIRING

The Remote Pairing function links your camera to a specific remote. If unpaired, the camera will work with any Drift HD remote control in range. This can cause problems if more than one person is using a remote at the same time. For example, if your friend presses his remote's STOP button, your recording will also stop, whether you want it to or not. Pairing your remote to your camera will prevent this from happening – your camera will only respond to instructions from your remote.

Your Drift HD remote is paired with your camera out of the box, so you do not need to pair it again. If you lose or damage your remote however, you will need to cancel the old pairing and pair the replacement remote with your camera.

To Cancel a Remote Pairing

1. Open the Setup Menu, highlight the Remote Pairing option and press the SELECT button.
2. Highlight the Reset icon (the red "X") and press the SELECT button.
3. The Remote Pairing is now deleted. The icon next to the Remote Pairing option will change into a red cross to indicate the remote is no longer paired.

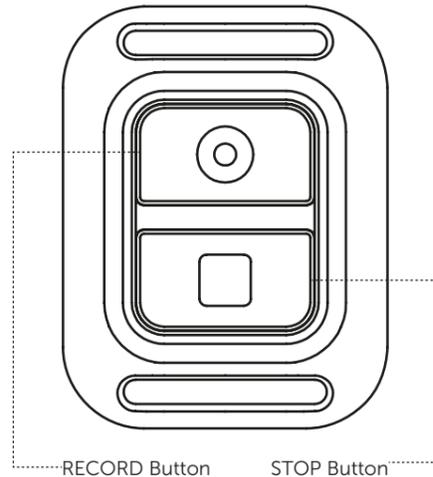

Pairing the Remote Control to your camera

1. Press the MENU button to open the Main Menu.
2. Highlight the Setup icon, and press the SELECT button.
3. Highlight the Remote Pairing option on the first page of the Setup Menu and press the SELECT button.
4. Press the RECORD Button on the Remote. The camera will beep if the remote is recognized.
5. The icon next to the Remote Pairing option will change to indicate the pairing (two white arrows).

Pairing Multiple Cameras to a Single Remote

It is possible to pair multiple cameras with a single remote. This allows them all to be operated with one button press, but prevents other Drift HD remotes from interrupting your recording.




For every camera you wish to pair:

1. Press the MENU button to open the Main Menu.
2. Highlight the Setup icon, and press the SELECT button.
3. Highlight the Remote Pairing option on the first page of the Setup Menu and press the SELECT button. Leave the camera this way.

Once every camera to be paired is displaying the screen above:

4. Press the RECORD Button on the Remote. Each camera will beep if the remote is recognized. Any camera that does not beep and return to the Setup menu automatically will not be paired – try pressing the RECORD Button again if this happens.
5. The icon next to the Remote Pairing option will change to indicate the pairing – in every camera (two white arrows).

! When pairing multiple remotes, always test the remote to see if it operates all the cameras before mounting them. You don't want to find out later that one of your cameras didn't start recording.

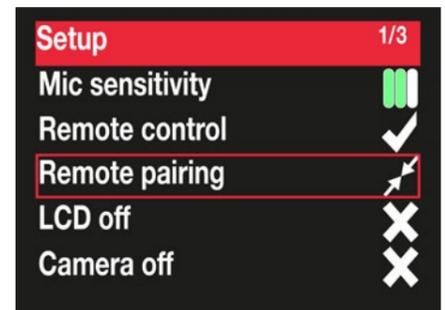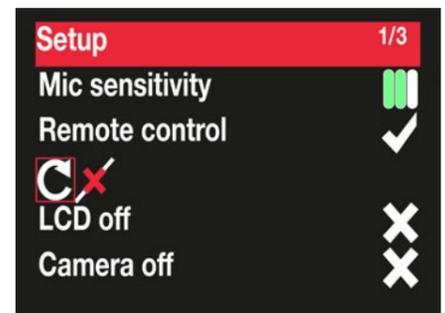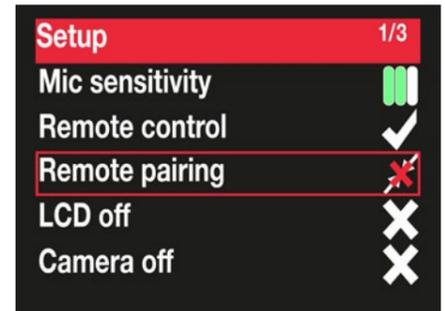

conserving battery life

The Drift HD comes with a rechargeable 1100mAh Lithium-Ion battery, allowing you to record continuously for hours between charges. However, sometimes you may find yourself in a location without a power outlet to charge your camera with. Also, cold conditions drain battery power at a faster rate. Fortunately, the Drift HD comes with a number of features to extend the battery life. These can all be found in the Setup Menu.

Note: Changing camera settings is described in the Setup Menu section on page 23-24.

LCD Off

The Drift HD's built-in LCD screen consumes power, so one of the best ways to extend your battery life is to use the LCD Auto-Off function. By default this LCD screen is always on, but it can be set to turn off when no buttons are pressed for a while (the exact time interval is chosen when turning this function on). The camera will still function as normal when the screen is switched off – in Live Preview mode, the camera is ready to record at any time, and if recording is in progress, it will continue to record with the screen off. The LCD remote is also useable with the screen off. The screen can be turned on again by pressing any button.

Note: Do not use the Select button to switch the camera screen back on – doing so will begin a new recording or stop the current recording if the camera is in Live Preview mode. Unless you specifically want to start or stop a recording, use one of the other buttons.

Changing the Brightness Setting

The LCD backlight also consumes power. If you don't want to switch the LCD screen off, it is possible to reduce its intensity by using the LCD Brightness setting on the second page of the Setup menu. You may notice a slight increase in battery life if you use a lower brightness setting.

Camera Auto-Off

It is also possible to set the camera to switch off entirely when no buttons are pressed for a set amount of time (the exact time interval is chosen when turning this function on). The main use of this function is to automatically switch off the camera in case you forget to do so yourself.

Note: This will not switch the camera off while recording is in progress. However, when the camera does switch off, you will need to switch it back on again before you can record any new video.

Note: The remote control will not operate the camera if the camera is switched off.

Spare batteries

If the battery life of the Drift HD is not long enough for your purposes, you can charge a second battery before you set out and then change it when the first one runs out. Spare 1100mAh batteries and external PowerPacks are available from the Drift dealers. Please visit our official website <http://www.driftinnovation.com/> for more information regarding batteries and accessories.

camera care

The Drift HD is specifically designed for extreme sports. It is a very durable piece of equipment. However, to ensure a long and healthy life for your camera, please follow the instructions below.

Cleaning the Camera

During your sporting activities, the camera will inevitably get dirty or wet. Although this is not an issue, it is recommended that you clean the Drift HD whenever this occurs. Clean the camera thoroughly with a damp cloth and let it air dry before you open the back hatch or rotate the lens. Take extra care when cleaning sensitive areas, such as the built-in microphone or the internal speaker.

Cleaning the lens and LCD screen

In order to provide a clear image for high definition video, it is important to keep the camera lens clean. Be careful not to scratch the camera lens whilst cleaning it. Wipe off any surface mud or water from the lens with a damp cloth and use a dry scratch-proof cloth to polish the lens once it is dry.

Cleaning the seals

To ensure that the camera remains weatherproof and water resistant, it may be necessary to occasionally clean the contact surfaces around the rear camera hatch seal. This can be done by wiping a damp cloth around the seal. Be careful not to leave excessive water on the seal, and let it air dry.

! Scratch-proof cloths are available from any camera shop or optician.

! You can run a little Vaseline around the rubber seal from time to time to keep the seal airtight.

menu options

A) THE MAIN MENU

To open the Menu, press the MENU button when the camera is switched on. A screen containing the four Menu icons will appear:

If the Micro SD Memory card contains any Video or Photo files, the number of each will be indicated beside the Video and Photo menu icons.

Opening the Sub-Menus

1. Once the Main Menu is open, use the UP and DOWN buttons to highlight the icon of the menu option you wish to open.
2. Press the SELECT button.

B) VIDEO MENU

Once you have selected the Video Menu, you will either see the 'No File' screen, or you will see a thumbnail image of the last video file recorded to the Micro SD card.

Video Playback

1. Scroll through the thumbnail images using the UP and DOWN arrows.
2. Once you find the video you want to watch, press the SELECT button.
3. A screen with three options will appear - highlight the View option and press the SELECT button. The video will start playing.
4. Press the SELECT button to pause and resume playback, or the MENU button to exit.

Deleting Videos

1. Scroll through the thumbnail images using the UP and DOWN arrows.
2. Once you find the video you want to delete, press the SELECT button.
3. A screen with three options will appear – highlight the Delete option and press the SELECT button.
4. Confirm file deletion by highlighting the tick icon and pressing the SELECT button.

C) PHOTO MENU



Once you have selected the Photo Menu, you will either see the 'No File' screen, or you will see a thumbnail image of the last photo saved to the Micro SD card.

Viewing Photos

1. Scroll through the thumbnail images using the UP and DOWN arrows.
2. Press the MENU button to exit.

Slideshow Function

1. Scroll through the thumbnail images using the UP and DOWN arrows.
2. Once you find the image you want to show first, press the SELECT button.
3. A screen with three options will appear – highlight the View option and press the SELECT button. The camera will show all the photos on the card in order, changing image every few seconds.
4. Press the SELECT button to pause the slideshow, and press it again to resume it.

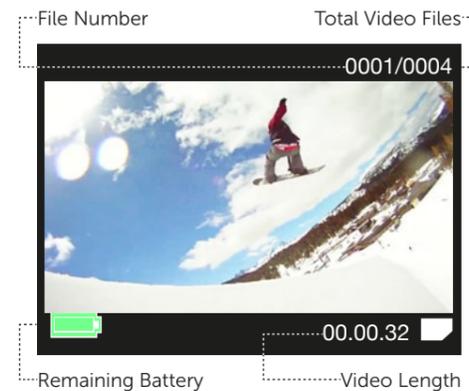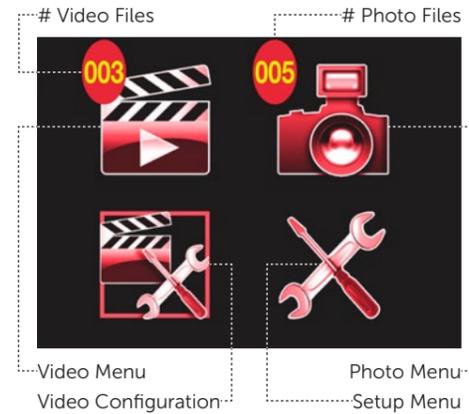

Note: The MENU button also functions as a BACK button. Pressing the MENU button while in a sub-menu will take you back to the Main Menu. Pressing the MENU button on the Main Menu will take you back to Live Preview mode.

! You can Fast Forward and Rewind a video while it is playing. Press the DOWN arrow to fast forward, and the UP arrow to rewind. Once you reach your desired point in the file, press the SELECT/Play button to pause the video. Press the SELECT/Play button to resume playback.

Note: You can delete all the videos on the camera by selecting the Delete All option. This will not delete any of the photo files on the SD card.

! Use the slideshow function when the camera is connected to a television to view all your photos on a big screen.

Deleting Photos

1. Scroll through the thumbnail images using the UP and DOWN arrows.
2. Once you find the video you want to delete, press the SELECT button.
3. A screen with three options will appear – highlight the Delete option and press the SELECT button.
4. Confirm file deletion by highlighting the tick icon and pressing the SELECT button.

D) VIDEO CONFIGURATION MENU

To change Video Configuration settings, highlight the setting you wish to change and press the SELECT button. Use the UP and DOWN arrows to choose the option you want, and press the SELECT button again to confirm it. The icon next to the setting name will reflect the new setting.

Note: The options available depend on the recording mode selected – the Resolution option is only available in Video mode, and the Sequence Interval option is only available in Time Lapse mode.

Setting	Options	Description
Record Mode	1. Video (Default) 2. Photo 3. Time Lapse	Choose whether to record video, still photos or time-lapse photos.
Resolution	4. 1080p HD 5. 729p HD (Default) 6. WVGA (SD)	Different video qualities can be selected to optimise the video quality or file size. 1080p requires the most memory but has the best video quality.
Exposure	7. -2.0 8. -1.0 9. 0 (Default) 10. +1.0 11. +2.0	(Advanced Users) The exposure setting determines the camera's sensitivity to light. If conditions are very bright (eg. sun on snow), use a negative value. For dark conditions (eg. dusk), use a positive value. Most of the time you can just use zero.
Outdoor / Indoor	12. Outdoor 13. Indoor	
Sequence Interval	14. 3 seconds (Default) 15. 5 seconds 16. 10 seconds 17. 30 seconds	Allows the user to select the time interval between photos when shooting in Time-Lapse mode.

! You can delete all the photos on the camera by selecting the Delete All option. This will deleted only the photos, and will not affect any of the video files on the micro SD card.

! Once a file is deleted, it cannot be restored. Make sure you no longer need a video before deleting it. Please be especially careful when using the Delete All option.

menu options

E) SETUP MENU

To change Camera Setup settings, highlight the setting you wish to change and press the SELECT button. Use the UP and DOWN arrows to choose the option you want, and press the SELECT button again to confirm it. The icon next to the setting name will reflect the new setting.

Menu	Options	Description
Mic Sensitivity	1. High 2. Medium (Default) 3. Low 4. Off	Different sports have different ambient sound levels. Generally choose Low for motorsports and Medium for cycling and wintersports.
Remote Control	5. Yes (Default) 6. No	Use this option to turn remote control functionality on or off.
Remote Pairing	7. Paired (Default) 8. Not Paired	This options allows for the camera to be paired with a specific remote. Please see the pairing instructions in page 18.
LCD Off	9. Never (Default) 10. 5 seconds 11. 10 seconds 12. 20 seconds 13. 1 minutes 14. 5 minutes	To conserve battery life, the LCD screen can be set to power down after a set period of time. The camera remains on - only the LCD screen powers down. To switch on the LCD screen, just press any button on the control panel.
Camera Off	15. Never (Default) 16. 1 minutes 17. 5 minutes 18. 10 minutes 19. 20 minutes 20. 30 minutes	To conserve battery life, the whole camera can be set to power down after a set period when not in use. Once powered down, the camera will need to be switched on again. The camera will not switch off while recording is in progress.
Speaker Volume	21. Off 22. Low 23. Medium 24. High (Default)	Use this option to change the volume level of the built-in speaker.

LCD Brightness	25. High (Default) 26. Medium 27. Low	Use this option to change the brightness of the built-in LCD screen.
Date	28. Year 29. Month 30. Day	Set the camera date. When the battery is removed or runs out of charge, the date information is lost and will need to be reset.
Time	31. HH 32. MM	Set the camera time. When the battery is removed or runs out of charge, the time information is lost and will need to be reset.
Date/Time Stamp	33. Off (Default) 34. On	Certain video applications require a date/time stamp. Enabling this option will add the time and date to the bottom-right corner of all video footage.
Language	35. English (Default) 36. French 37. German	
Format	38. No 39. Yes	Use this option to format your Micro SD card. Please note that all data will be lost.
Reset Settings	40. No 41. Yes	Use this option to reset all camera options to the factory settings.
Firmware Version		The number indicates the firmware version installed on the camera. When new firmware is successfully installed, this number will change.

F) SETTING THE TIME & DATE

1. Open the Camera Setup Menu as described on the opposite page.
2. Highlight the Time or Date setting on page 2 of the Setup Menu and press the SELECT button.
3. Press the UP and DOWN buttons to adjust the value of the time or date fields, and the SELECT button to move between hours/minutes or year/month/day.
4. Press the MENU button to save the time/date and return to the Setup Menu.

connecting the camera

You can copy your recorded video footage and photos to a PC or Mac computer by using the included USB cable.

A) CONNECTING THE CAMERA TO A COMPUTER

Connecting to a Windows PC

1. Connect the camera to your PC using the USB cable. The camera LED will turn blue and the camera will display a black screen.
2. Your operating system may be set up to show a file window automatically. Otherwise, double-click on the My Computer icon.
3. Your computer should recognize your camera as a Removable Disk. Look for the DRIFT Removable Disk and double click on it to open it.
4. Double-click on the 'DCIM' folder to open it.
5. Inside the 'DCIM' folder you will find a folder called '100DRIFT' which contains all photos and videos recorded on the micro SD card. If there are a large number of files, there will be multiple folders - 100DRIFT, 101DRIFT, etc.
6. Copy the desired video and photo files to your PC.

Connecting to a Mac

1. Connect the camera to your Mac by using the USB cable. The camera LED will turn blue and the camera will display a black screen.
2. Your operating system may be set up to show a file window automatically. Otherwise, open the Finder.
3. Your computer should recognize your camera as an external device called DRIFT. Click on it to open it.
4. Click on the 'DCIM' folder to open it.
5. Inside, the 'DCIM' folder you will find a folder called '100DRIFT', which contains all photos and videos recorded on the Micro SD card. If there are a large number of files, there will be multiple folders – 100DRIFT, 101DRIFT, etc.
6. Copy the desired video and photo files to your Mac.

Note: The battery does not need not be inserted or charged to copy files to a computer.

Note: You can also copy data from the memory card by using a USB card reader (not included). Your computer may also have an Micro SD card reader built into it, which you can use to transfer your files.

B) PLAYING THE VIDEO FOOTAGE ON A COMPUTER

1. Some computers may not have the correct codecs required for video playback and editing.
2. If your experience difficulties playing video recorded with your camera, you can download VLC media player for free from <http://www.videolan.org/>
3. If you are experiencing difficulties editing video or do not wish to use VLC player for playback, you will need to download and install a codec pack. The FFDshow codec pack can be downloaded from http://www.free-codecs.com/FFDshow_download.htm
4. Do not forget that to play HD video files on your computer you require a powerful computer, with a modern video card and plenty of RAM.

C) CONNECTING THE CAMERA TO A TV

1. While the camera is turned off, connect it to your TV using a Micro HDMI cable (not included).
2. Switch the camera on.
3. Once booted up, the image usually displayed on the camera's LCD screen will instead be displayed directly on your TV, and the sound will come out of the TV speakers.
4. All other camera functions and the camera buttons work as normal.

replacing the lens

In order to follow the procedure below, you must have a Drift Replacement Lens Kit in hands (not included in the package).

1. Using the small screwdriver, gently remove the four screws that hold the lens glass protector.
2. Remove the black frame that holds the lens.
3. Remove the old lens from the frame, including the washer.
4. Taking the new pieces of the kit, insert the lens on the frame, and the washer just behind the lens.
5. Position the frame on its original place, and gently tight the screws.

What type of memory card does the camera support?

The Drift HD supports Micro SD cards from all leading brands. We strongly recommend you to stick to reliable brands and dealers. The unit is also compatible with Micro SDHC cards.

What is the biggest Micro SD Card I can use?

The Drift HD supports Micro SD / SDHC cards with a capacity of up to 32GB.

Are the Micro SDXC cards compatible?

No, the Drift HD is not compatible with the SDXC technology.

How does the remote control work?

The remote control uses radio frequency (RF) to communicate directly with the camera unit. The remote is RF based, rather than infrared (IR), as used in other helmet cameras. As a result, you do not need to point the remote at the camera. As long as the remote is in range of the camera, it will pick up the remote control signal.

How far will the remote control work?

The wireless remote control has a range of 3 meters (about 10 feet).

What is the remote pairing feature?

The Remote Pairing function links your camera to a specific remote. If unpaired, the camera will work with any Drift HD remote control in range. This can cause problems if more than one person is using a remote at the same time. Pairing the remote to your camera will ensure your camera only responds to instructions from your remote control. The Drift HD comes paired with the remote in the box.

Full instructions on Remote Pairing can be found in the "Using the Remote" section on page 22.

How long will the batteries last?

The Drift HD comes with a 1100mAh rechargeable Lithium-Ion battery. When recording video in 1080p with all battery saving features switched off, the camera will operate for a total of 3 hours at room temperature, and 2½ hours in cold conditions (such as -5°C / 23 F), before the battery runs out. Several camera options can be changed in order to extend the battery life – these are detailed in the "Conserving Battery Life" section on page 19.

In addition, the 1100mAh Drift spare battery is available from Drift dealers. Please visit <http://www.driftinnovation.com/> for more information.

How do I charge the battery?

The battery is charged via a USB port built into the camera. You don't necessarily have to charge it via a computer however. Many electronics stores sell USB power adapters that can be used to charge the Drift HD. These have a Mini USB port at one end, while the other end plugs into a power outlet or wall socket. Please follow the charging instructions on page 11 carefully to ensure the camera enters charging mode. If the LED does not turn blue, the camera is not charging.

Can I power my camera from a cigarette lighter adapter?

Yes. When connected to a USB cigarette lighter adapter, the unit will draw its power from your bike or car battery. Please note that while this allows you to power the camera unit, it does not recharge the battery unless you put the camera into charging mode (page 12). You can buy a USB cigarette lighter adapter from all of our leading dealers or from electrical stores.

The videos and photos give me a slight fisheye effect. Is this right?

Yes. We specifically selected a 170° lens to provide users with the quirky wide angle that was prominent in the early days of helmet cameras, particularly in skateboarding. The effect is less pronounced on objects in the distance and more pronounced on objects close to the camera lens. If you prefer a tighter angle, you can use the camera's zoom function, or shoot in 1080p. But we think you'll grow to love this classic hallmark of action sports video.

What is the difference between 1080p and 720p?

The Drift HD can record video in both 1080p and 720p High Definition video formats. 1080p video files have a resolution of 1920x1080 pixels, providing the highest level of video quality but taking up the largest amount of space. 720p files have a resolution of 1280x720 pixels, providing excellent video with a smaller file size. All three available video formats provide a 16:9 aspect ratio widescreen image.

What are the dimensions of the video camera?

The dimensions of the camera are 133 (L) x 50 (D) x 33 (W) mm and those of the remote control are 52 (L) x 40 (W) x 13 (D) mm.

Can I connect my camera to a tripod or suction cup?

Yes. The Drift HD comes with a built-in ¼"-20 (8mm) female camera thread. This allows the camera to be mounted directly on any tripod, suction mount (such as the Panavise 809) or any other camera mount with a ¼" thread. These mounts can be purchased from all our leading dealers or from camera stores.

How waterproof is the camera?

The Drift HD action camera is weatherproof and water resistant. The camera is fully splash-proof and weatherproof, but it is not designed to be used in a water environment. Please be aware of this when using the Drift HD. Drift Innovation will not assume any responsibility for camera malfunction caused by liquid entering the camera as a result of misuse by the user.

What are the benefits of using the camera's Outdoor Mode?

The Outdoor mode allows the Drift HD to record video and capture photos in a dark environment, such as at dusk. It does this by increasing the sensitivity of the camera to light. The trade-off is a slight decrease in image quality – the image will contain noise and possibly be slightly more blurry. Please note that this is normal for digital cameras. The Outdoor mode is also more effective when capturing photos than when recording video.

How do I connect an external microphone?

An external microphone accessory is available exclusively for the Drift HD – please visit our website www.driftinnovation.com/ for more details on how to use and where to buy it.

How do I upgrade the camera firmware?

From time to time, Drift Innovation may release new firmware versions to improve the functionality of the Drift HD. These are not essential, but the updates may improve your recording experience. To be kept informed of new firmware releases, please register at www.driftinnovation.com/ where you will be able to access and download new firmware along with detailed installation instructions.

system requirements

To smoothly view and edit 1080p HD video, powerful hardware is required

Recommended System Requirements – Windows

- 3.2 GHz Pentium 4 processor or higher
- At least 2GB of RAM
- Graphics Card with at least 256MB of video RAM (512MB for video edition)
- Direct X 9.0c or later
- Microsoft Windows XP (SP2 or later), Windows Vista or Windows 7

Recommended System Requirements - Macintosh

- 2.2 GHz Intel Core Duo or higher
- At least 1GB of RAM
- Graphics Card with at least 256MB of video RAM (512MB for video edition)
- Mac OS X v10.4.11 or later

! High Definition Video requires large amounts of hard drive space. If your hard drive is not large enough, you can purchase an external hard drive to store your video files. These are relatively inexpensive, and can also be used to back up your other computer files as well.

troubleshooting

The LCD screen does not display anything

- Check that the rechargeable battery is properly installed.
- The battery may need recharging.
- If the LED is switched on, try pressing a button on the control panel. The LCD Auto-Off function may be switched on. Please see page 23 for details.

After the camera is connected to my PC, it cannot find the new drive in the My Computer folder

- Ensure each end of the USB cable is properly connected to your PC and your camera.
- Is there an Micro SD card in the camera's memory card slot?
- Your USB port may not be working correctly. Try connecting another USB device into the port. If the other device does not work, the USB port may have a malfunction. In this case, try the other USB ports in your computer. If you still have problems, contact your system manufacturer or the manufacturer of your USB card.

I can't capture video footage

- Is there a Micro SD card in the camera's memory card slot?
- There may not be enough space left on the memory card. If the memory card is full, there will be an 'x' through the memory card indicator.
- Ensure the Micro SD card is not locked. The LCD will display a padlock symbol if the card is locked. The card can be unlocked by sliding a small switch located on the card itself.

I can't play the video footage on my television

- Ensure each end of the component cable is properly and firmly connected to the camera and to the correct ports on your television.
- Check that the camera and television are both turned on.
- Check that you have set the television to display the correct input.

The sound is very low or there is no sound

- Ensure the camera speaker and the camera microphone are turned on in the Setup Menu.
- The camera is specifically designed for extreme sports, where noise levels can be very high. As a result, the microphone is less sensitive than in a regular digital camera. You can increase the microphone sensitivity in the Setup menu.

I can't view clips on my computer, or I get an error message

- You may have outdated codecs. We recommend using VLC player, which is available for free from www.videolan.org
- If you wish to use WMP or other editing or video playback software you need to install a codec pack. You can download the FFDshow codec pack for free from http://www.free-codecs.com/FFDshow_download.htm

I switched my camera off during recording, and the video clip is damaged.

- Please ensure that you stop recording before switching off your camera, as this can damage the video clip you are currently recording.

technical specifications

- Sensor type: CMOS
- Water Resistant (weatherproof)
- Video resolution: 1080p, 720p & SD
- Video format: .MOV (H.264 codec)
- Frames per second:
 - 25 / 30 / 50 / 60 / 90 FPS in SD
 - 25 / 30 / 50 / 60 FPS in 720p
 - 25 / 30 FPS in 1080p
- Video format: 16:9
- Lens Rotation: 300°
- Recording Angles: 127° in 1080p, 170° in 720p & SD
- Exposure: Auto / Manual (advanced users)
- Zoom: Digital x4 (in 1080p, 720p & SD resolutions)
- Remote range: 3 meters (10 feet)
- Built-in Microphone
- Inputs: 2.5mm External Microphone
- Audio/Video Output: Micro HDMI (cable not included)
- Battery: 1100mAh rechargeable lithium-ion
- Power-Save option saves batteries by powering down the screen
- Memory capacity: Supports Micro SD memory cards up to 32GB
- Photo resolution: 9 Megapixel
- LCD screen: 1.5" colour TFT
- Lens focal range: 0.5m to infinity
- Dimensions:
 - Camera - 105 (L) x 50 (D) x 37 (W) mm
 - Remote Control - 52 (L) x 40 (W) x 13 (D) mm
- Power: Camera - DC 3.7V / Remote control: DC 3V, 1x CR2032 battery (included)
- RF: Receiver (Camera): 433.92MHz ISM band / Transmitter (Remote): 433.92MHz ISM band
- Weight: Camera - 120g / Remote control - 19g
- Operating Systems: Compatible with Windows XP, Vista & Windows 7; Mac OS 10.2 onwards.

further help

We make every effort to ensure the accuracy and appropriateness of the information provided on our products. We encourage you to contact our Technical Support Team on info@driftinnovation.com with any problems and/or suggestions.

Please note that the Technical Support Team cannot issue or authorise any Returns / RMA's or replacements.

For a Return / RMA or replacement please contact the place of purchase.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

warranty

INFORMATION FOR USERS

In accordance with European Directives 2002/95/CE, 2002/96/CE and 2003/108/CE on the restriction of the use of dangerous substances in electric and electronic equipment as well as their waste disposal.

This symbol shown on the equipment indicates that, at the end of its useful life, the product must be collected separately from other waste.

Therefore, any products that have reached the end of their useful life must be given to waste disposal centres specialising in separate collection of waste electrical and electronic equipment, or given back to the retailer at the time of purchasing new similar equipment, on a one for one basis.

The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated and disposal of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimises the recycling and reuse of components making up the apparatus.

Abusive disposal of the product by the user involves application of the administration sanctions according to the laws in force.

**CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

Thank you for purchasing the Drift HD. We are confident you will have great fun with your brand new Drift camera!

Warranty

To obtain our warranty service, register your product at www.driftinnovation.com as soon as you purchase it.

Customer Support

- Check www.driftinnovation.com for firmware updates, product updates and user videos.
- We are here to help. If you have any suggestions, comments or problems, please contact our customer support team on info@driftinnovation.com.